

Bendix Spicer Foundation Brake LLC

A Bendix CVS and Dana Joint Venture

BENDIX SPICER FOUNDATION BRAKE LLC ENCOURAGES SAFE DE-POWER AND DISPOSAL PROCESS FOR SPRING BRAKES

The power spring contained within the emergency section of a spring brake can hold up to 2,800 pounds of force; and if the emergency section clamp band of a double clamp style spring brake is removed, the power spring could uncoil and escape, releasing its force and causing serious personal injury or even death. The sheer force released can result in severe bodily injury, or even loss of life.

In the interest of service technician safety, Bendix Spicer Foundation Brake does not recommend servicing the emergency section on a double-clamp spring brake.

Bendix Spicer Foundation Brake further advises that the power spring on any spring brake should be safely de-powered before the disposal of any spring brake chamber. This procedure is to ensure that everyone involved with the disposal of a spring brake is free from the hazards associated with the power spring.

Finally, Bendix Spicer Foundation Brake also strongly recommends the power spring is properly caged with the use of a steel container specifically designed for this purpose, in order to safely dispose of the unit. One industry-recognized supplier of this type of equipment is listed below. Note: It is the sole responsibility of the user to ensure the container and procedure meets all of the requirements for safe spring brake disposal.

For more information, contact:

Alex Augoustidis, Product Manager
Bendix Spicer Foundation Brake LLC
(440) 329-9484
alex.augoustidis@bendix.com

or

Mark Kromer, Engineering Manager
Bendix Spicer Foundation Brake LLC
(440) 329-9782
mark.kromer@bendix.com



**Available from:
J.S.G. STEEL DESIGN, INC.
2246 S. Market Street
Elizabethtown, PA 17022
Phone: (717) 629-1475
Fax: (717) 361-3785**